 


## **AXLE ADAPTERS GUIDE**



2. Check the thread pich of your axis by putting it on sheet, but you can also measure the distance between the threads/coils.





3. Check the maximum length of the axle. Measure only the length of the shaft with thread.



EXTRAWHEEL ADAPTERS [MM]		ADAPTERS [MM]	YOUR AXLE LENGTH [MM]	AND THREAD PITCH [MM]
	12×1	135–142	150–165	1
	12×1	142–148	164–172	1
	12×1.5	142–148	170–180	1.5
	12×1.75	142–148	170–180	1.75
	12×1.75	157+	180–200	1.75