

# Hand Cart Handle

The Hand Cart Handle allows any Carry Freedom Y-Frame trailer to be used as a hand cart.

When the Y-Frame is used as a bicycle trailer you do not need to disconnect the Hand Cart Handle.

When the Y-Frame is used as a hand cart you do not need to disconnect the trailer towing arm.

If you bought your Y-Frame in 2004 you will need to drill a hole in its chassis to accept the handle.

5 year guarantee.

 
Made in Scotland.

**t:** 01560 600 369

**e:** info@carryfreedom.com

**w:** www.CarryFreedom.com

**carry  
freedom**<sup>TM</sup>

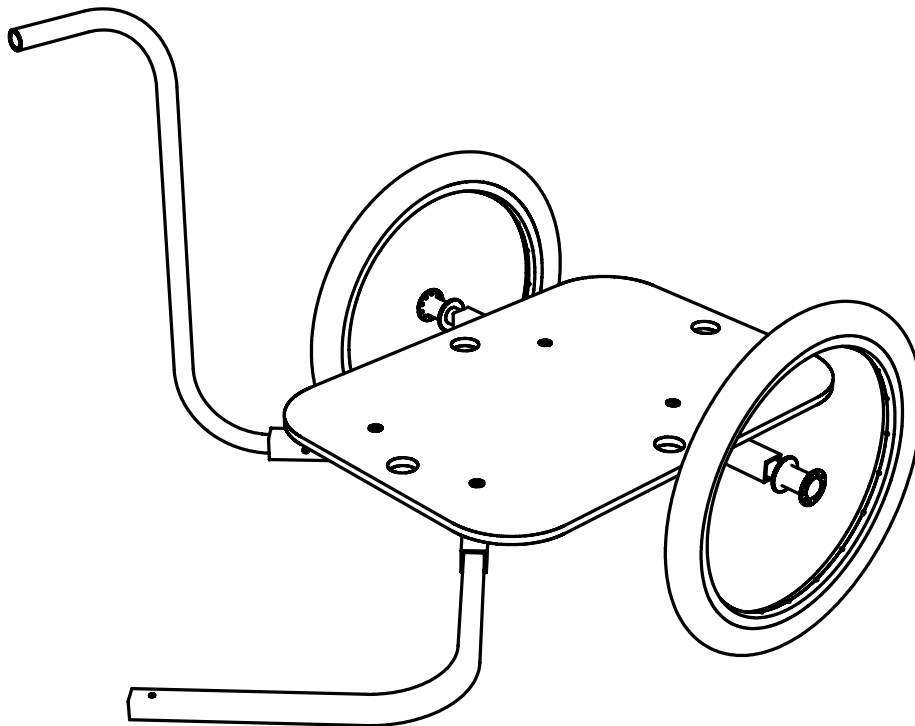

## To attach

The Hand Cart Handle is connected to the right hand arm of the Y on the Y-Frame chassis using the supplied spring gate pin.

Follow the same procedure for attaching the Hand Cart Handle as you do for attaching the towing arm to the trailer.

You can replace the Spring Gate Pin with a M6 bolt.

If your trailer was made in 2004 you will need to drill a hole in the frame for it to attach to. This hole is identical to the towing arm hole. It should be 6.5mm in diameter 50mm from the end, and in the center of the tube face.

## To use

To avoid hitting the trailer with your feet when using the Hand Cart Handle you need to walk with it to one side. So when walking the trailer forwards hold the handle in your left hand, and when walking the trailer backwards hold the handle in your right hand.

Do not carry more than 90kg on the trailer while using it as a hand cart.

Make sure the spring gate pin is secure, and the spring gate is properly closed before every use.

The Hand Cart Handle will rattle as you cycle. You can reduce the noise by wrapping it with electrical tape.